HIVE Flow

x 6

UK CA

FSC


CE

Made in Estonia, EU


info@huumsauna.com
huumsauna.com
#huumsauna

HUUM Sauna OÜ
Vahi tee 9, Tartumaa
60534, Estonia

HIVE Flow LS

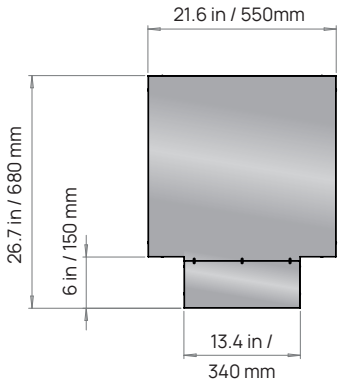



HIVE Flow Mini LS

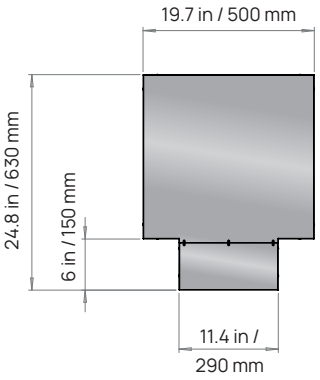

HUUM

OF SAUNA

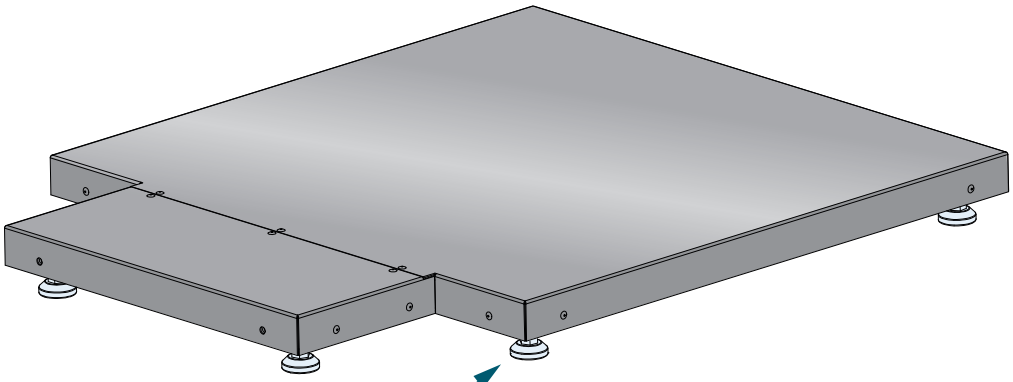

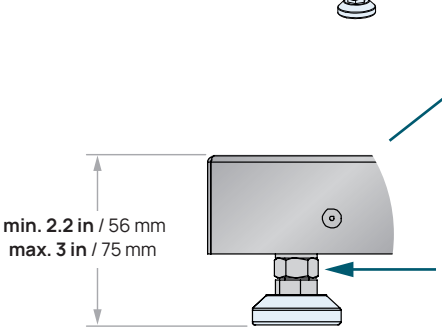

ENG The nut must be screwed against the bottom of the plate.

FRA Les écrous doivent être vissés contre le côté intérieur du support!

Tutorial video

ENG LS Protective Bedding

Protective bedding is an accessory that increases safety when the sauna stove is placed on a floor made of wood or other combustible material. We also recommend installing it if there is water underfloor heating system piping in the floor below the sauna stove. The thermal plate protects the floor and the piping.

- Remove the protective film.
- Install feet and nuts (6 pcs.)
- Put the protective bedding in place. The plate should be level and support all feet.
- To ensure sufficient load capacity, screw the nuts against the bottom of the plate.

Find the latest updates on our website: **huumsauna.com**

FRA LS Support chaud

La plaque de protection thermique est un accessoire qui augmente la sécurité lorsque le poêle de sauna est placé sur un sol en bois ou tout autre matériau combustible. Nous recommandons également de l'installer s'il y a des tuyaux de système de chauffage par le sol à eau sous le sol sous le poêle de sauna. La plaque thermique protège le sol et les tuyaux.

- Retirez le film protecteur.
- Installez les pieds et vissez les écrous (6).
- Installez le support de poêle. Le support doit être de niveau et s'appuyer sur tous ses pieds.
- Pour garantir une capacité de charge suffisante, vissez les écrous contre le côté intérieur du support!

Vous trouverez sur notre site web toutes les informations dont vous avez besoin **www.huumsauna.com**