Sunlight Outdoor Shower Assembly Instructions



Requirements:

2 People (recommended)
Tape Measure
Cordless Drill
Robertson Drill Bit
¾”(19mm) Nut Driver Bit

Manufactured by:

leisurecraft
BUILDING LUXURY

tel: 888-923-9813 | info@leisurecraft.com| web: www.leisurecraft.com

Sunlight Outdoor Shower Assembly Instructions

Parts List

Part #	Description	Quantity
720410/720447	2"x 3"x 31" - Front/Back Floor Support	2
720411/720448	2x3x28" Floor Joists	4
720412/720449	1" x 6" x 31" - Floor Boards	5
720413/720450	1" x 2 1/2" x 31" - Floor Boards	1
720414/720451	1" x 6" x 15" - Shower Pillar Top Plate	1
720415/720452	Assembled Sierra Shower Pillar Only	1
510SHARDWARE	Sunlight/Sierra Shower Hardware Package	1
720400	Stainless Brackets to Mount Pillar	2
510SMANUAL	Sunlight/Sierra Shower Owners Manual	1

Options

720404	Economy Shower Hardware (Cold Water Only)
720405	Premium Shower Hardware
720439	Single Towel Hook

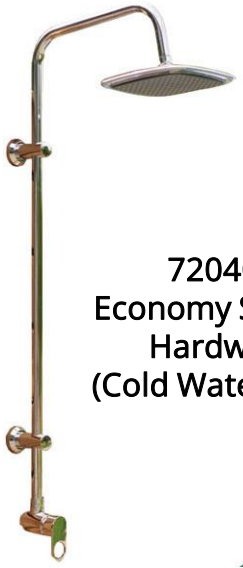

720404
Economy Shower Hardware
(Cold Water Only)



720405
Premium Shower Hardware

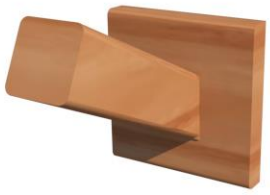

720439
Single Towel Hook

Manufactured by:

Sunlight Outdoor Shower Assembly Instructions



Locate the shower pillar top plate and secure it to the top of the assemble pillar assembly with 1 ½" (38mm) screws ensuring it is even on both sides.



Secure the front/back floor supports to the 2 outside floor joists with 2 - 2 ½" (64mm) screws in each corner.

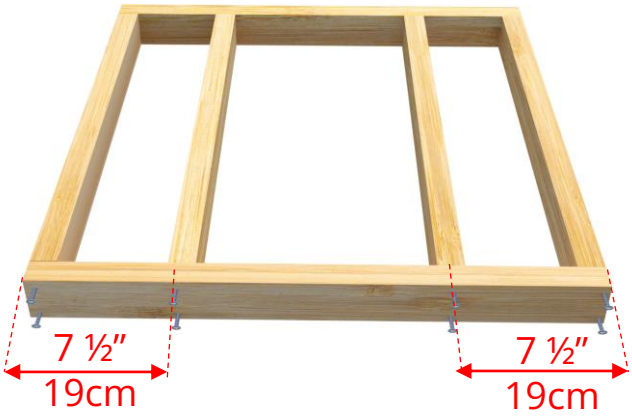

Measure 7 ½" from each end and center the inner floor supports and secure with 2 - 2 ½" (64mm) screws in on each end.

**** It is important these are measured correctly as the shower pillar will bolt into these supports.***



Space the floor boards out evenly over the base and secure into each of the floor joists using 2 – 1 ½" (38mm) screws into each joist.

Sunlight Outdoor Shower
Assembly Instructions



Position the assembled pillar centered and flush to the back of the shower base.



Secure the assembled pillar to the base with the provided lag screws and brackets.

**** It is recommended to pre drill these holes first to prevent splitting.***

Congratulations on the assembly of your Sunlight Outdoor Shower!